

PondSweep® Skimmer Retrofit Kit

(Item #41247)

NOTE

The retrofit kit is designed for use in our SK900PRO and SK1200PRO PondSweep® Skimmer models. After installation, the retrofit kit will help to reinforce the walls of the PondSweep® Skimmer and prevent them from becoming distorted by compacted soil.


Installation Instructions

PACKAGE INCLUDES:

- (2) Support Brackets
- (8) 3/4" Self Tapping Hex Head Screws

Skimmer Installation:

- 1) Place one support bracket along the front inside skimmer wall (A1) as shown. Starting 2.5" from either side of the skimmer, insert a self-tapping screw from the outside of the skimmer, through the skimmer wall, into the bracket, securing the bracket to the skimmer (A2). Continue inserting and securing remaining screws every 5"
- 2) Place the second support bracket along the back inside skimmer wall as shown (B) and secure as in Step 1. Continue inserting and securing remaining screws every 5".

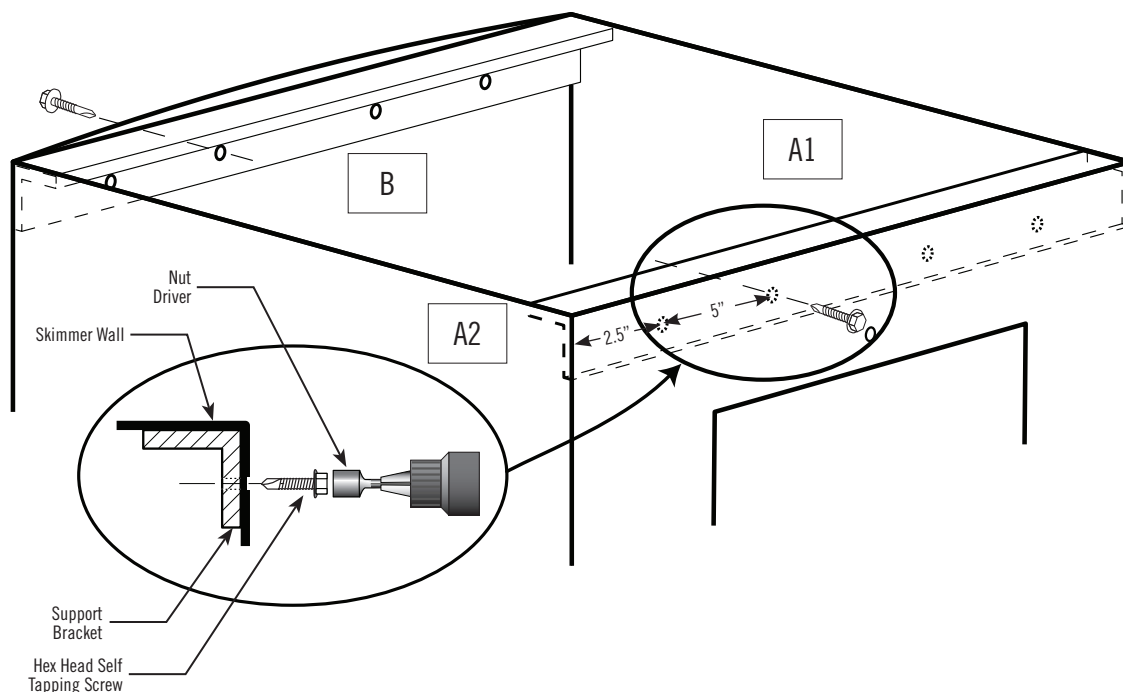

Made in U.S.A. for
Aquascape, Inc.
St. Charles, IL 60174 • Brampton, ON L6T 5V7
www.aquascapeinc.com

Kit de modification pour écumoire PondSweep^{MD}

(Article #41247)

NOTE

Le kit de modification est conçu pour être utilisé avec nos écumaires PondSweep^{MD} SK900PRO et SK1200PRO. Suite à l'installation, le kit de modification aidera à renforcer les parois de l'écumoire PondSweep^{MD} prévenant leur déformation par le sol compacté.

Directives d'installation


L'EMBALLAGE COMPREND:

- (2) supports
- (8) vis auto-perceuses à tête hexagonale de 3/4"

Installation dans l'écumoire:

1) Placer un support le long de la paroi intérieure devant de l'écumoire (A1) tel qu'illustré. Commenant à une distance de 2,5» de l'un ou l'autre des côtés, fixer le support à la paroi de l'écumoire à l'aide d'une vis auto-perceuse, en l'insérant à partir de l'extérieur de l'écumoire et au travers du support (A2). Insérer toutes les autres vis à chaque 5» de distance.

2) Placer le deuxième support le long de la paroi intérieure arrière de l'écumoire tel qu'illustré (B) et fixer tel qu'à l'étape 1. Insérer toutes les autres vis à chaque 5» de distance.

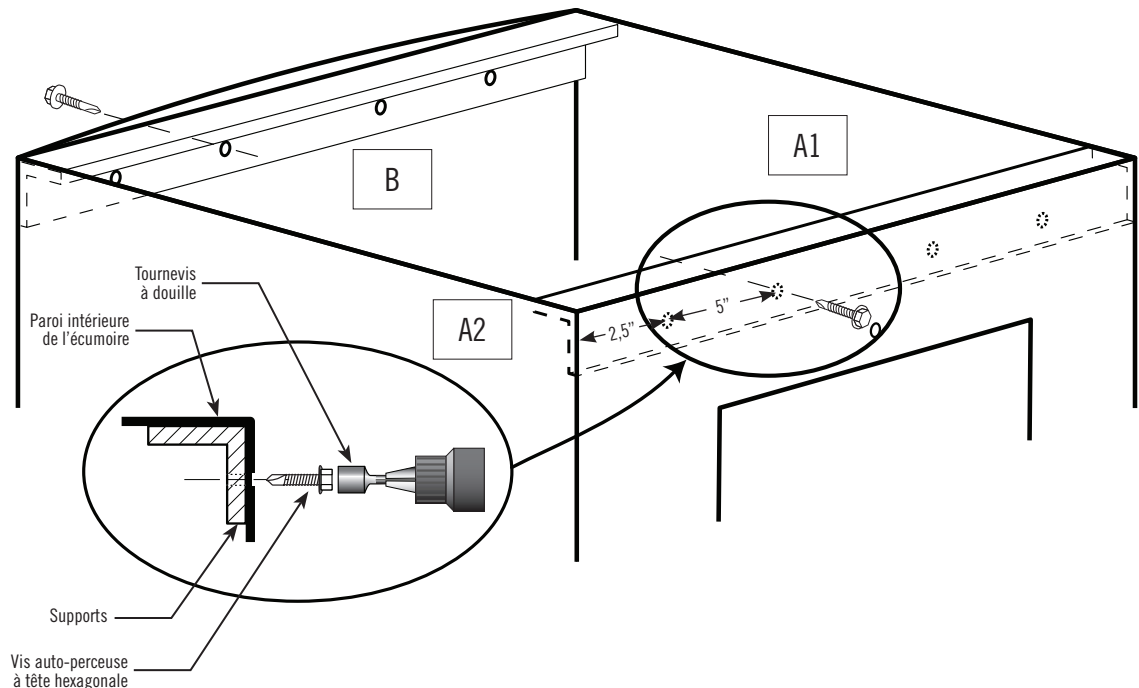

Fabriqué au États-Unis pour
Aquascape, Inc.
St. Charles, IL 60174 • Brampton, ON L6T 5V7
www.aquascapeinc.com